


BAUWAGEN 2013

Assembly instruction


1/16

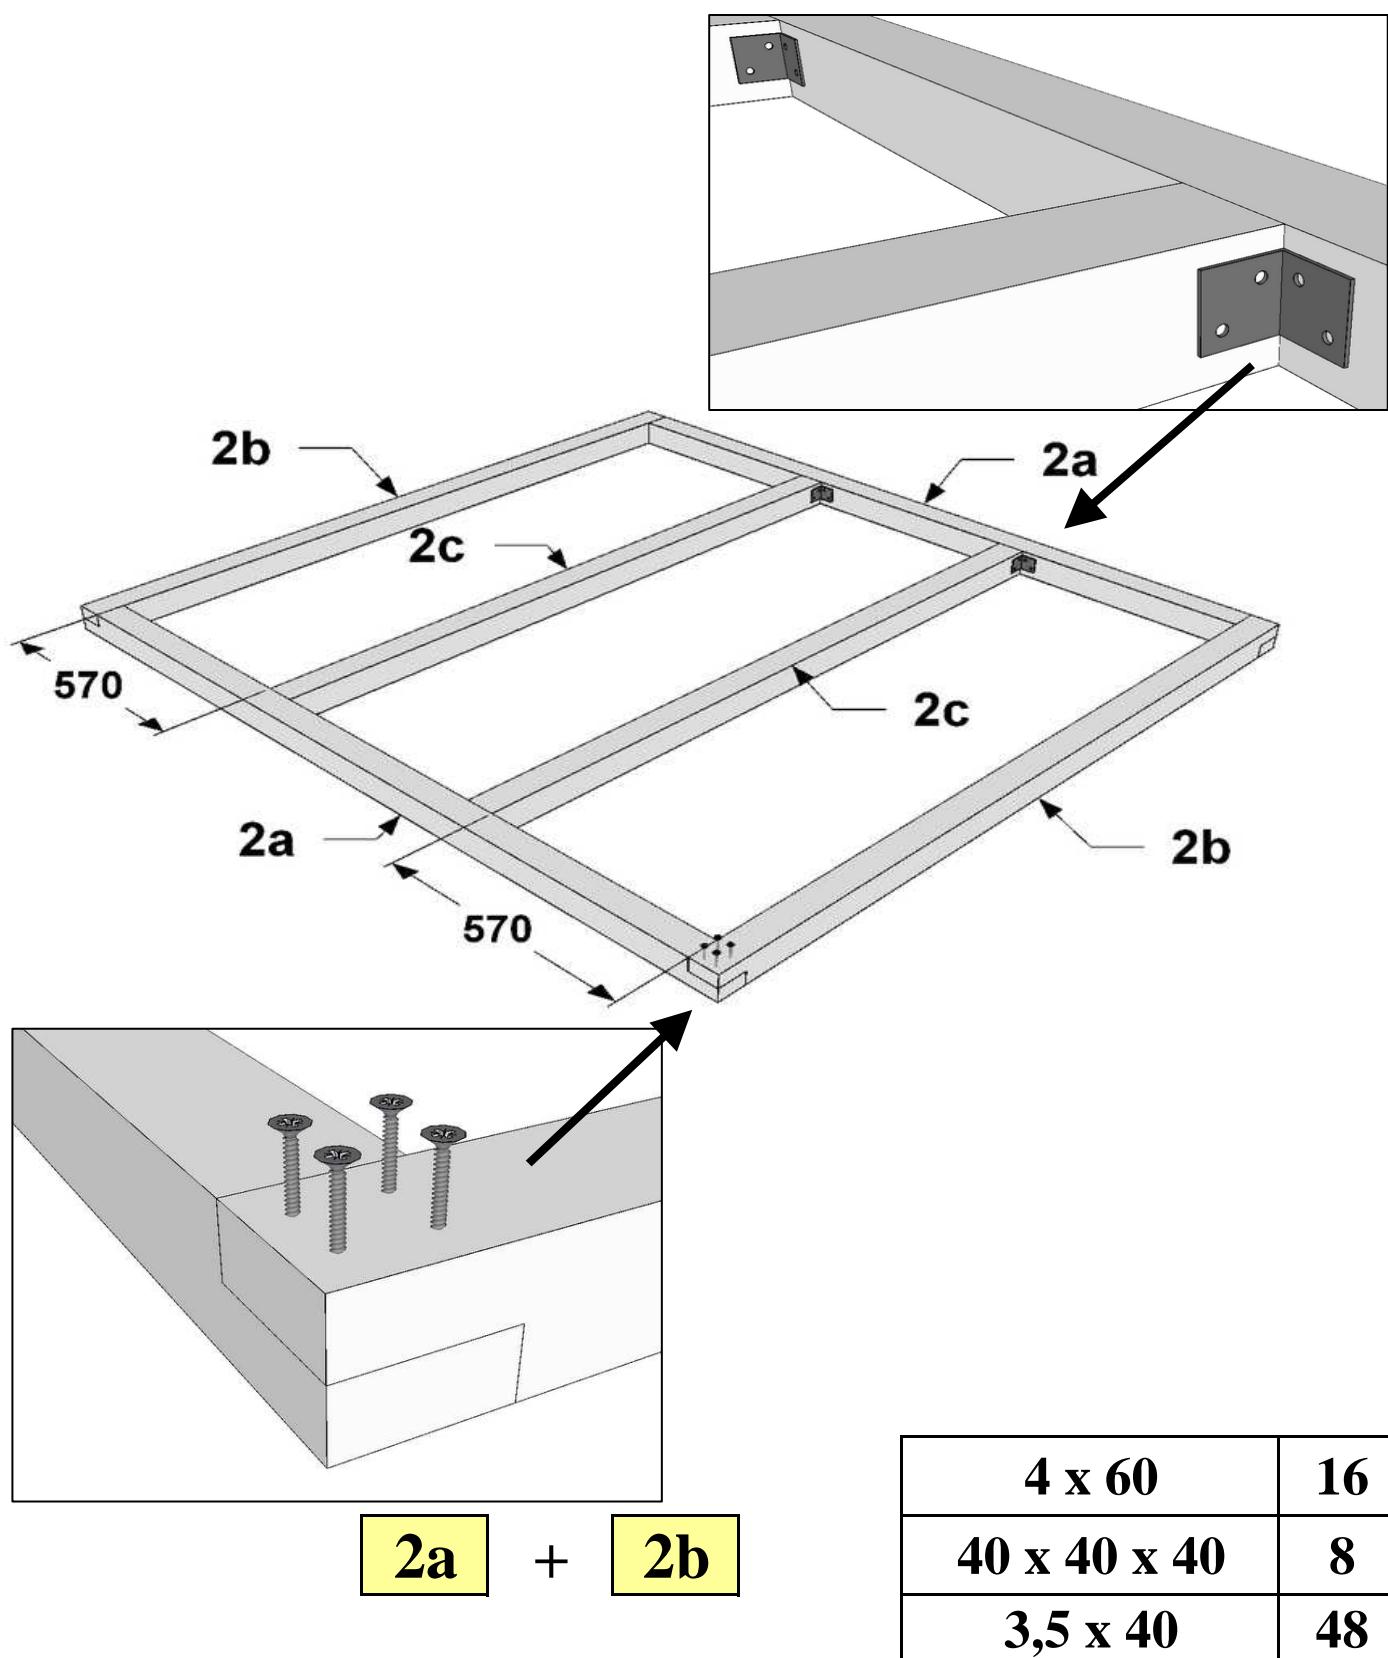

BAUWAGEN

Assembly instruction

2/16

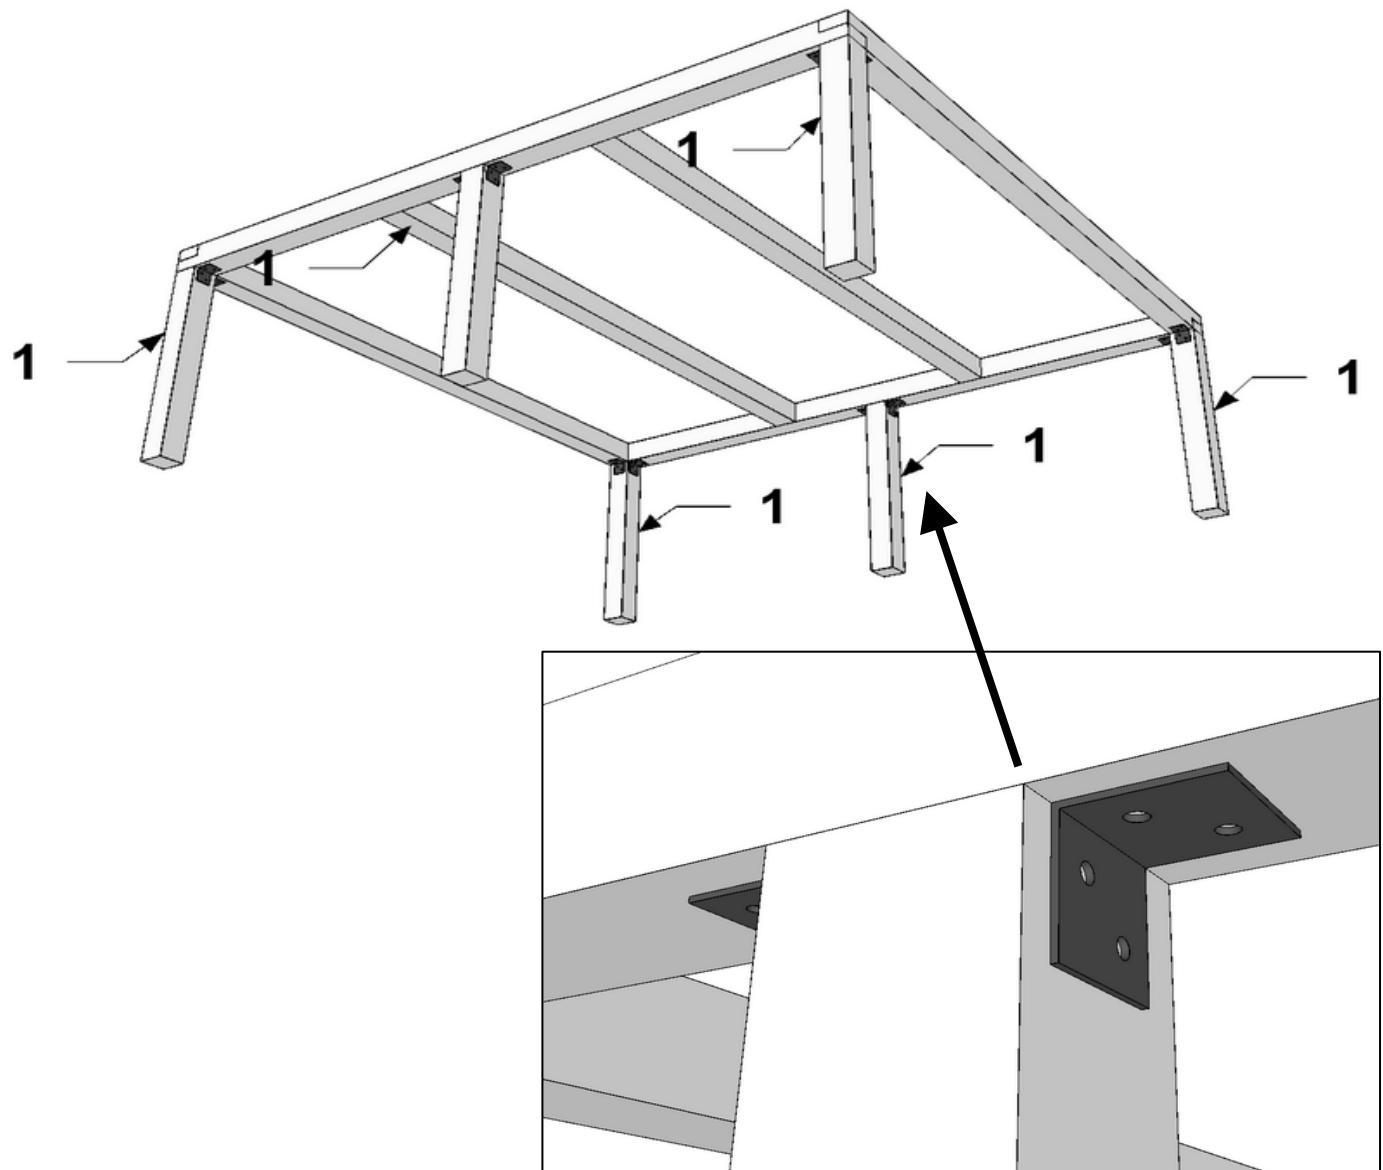



+ **1**

40 x 40 x 40	12
3,5 x 40	72

BAUWAGEN

Assembly instruction

3/16

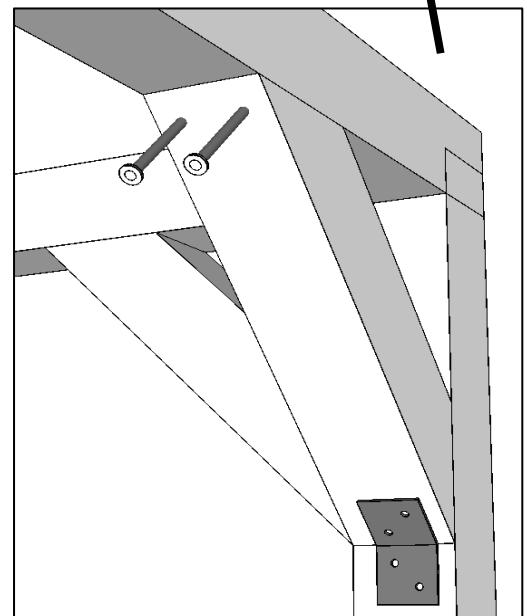
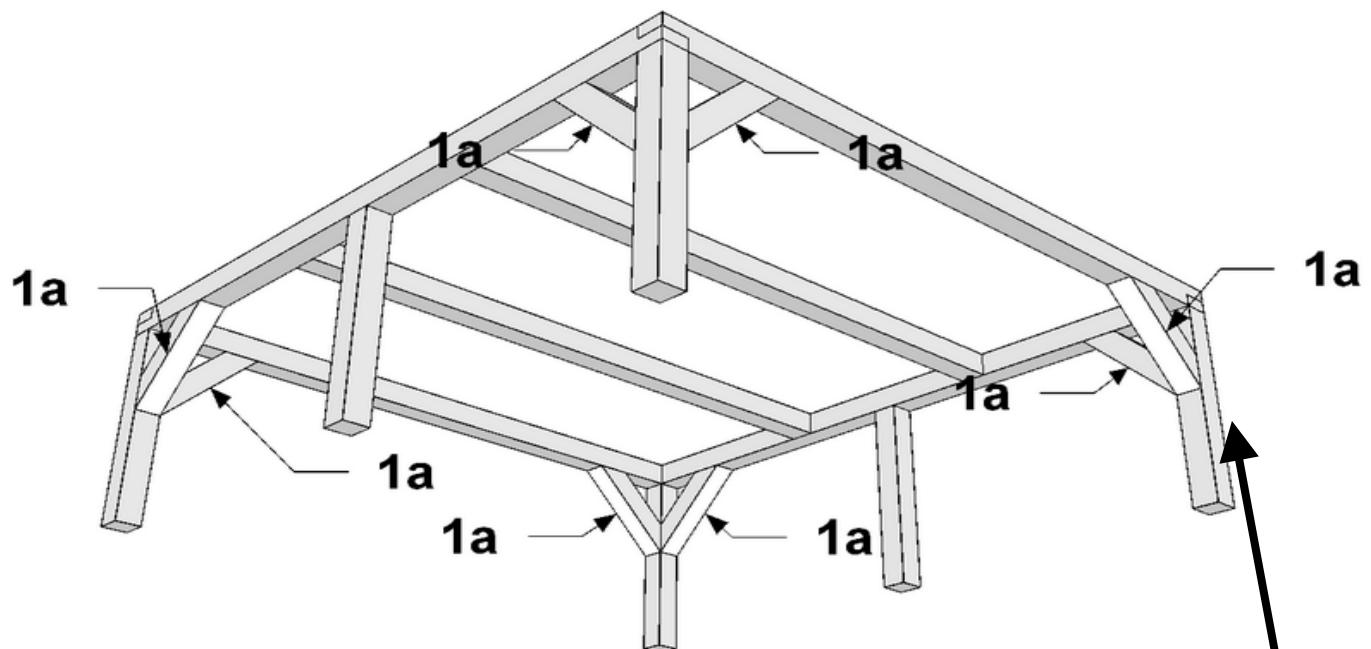


+ **1a**

4,5 x 70	16
50x50x35(135°)	8
3,5 x 40	48

BAUWAGEN
Assembly instruction

4/16

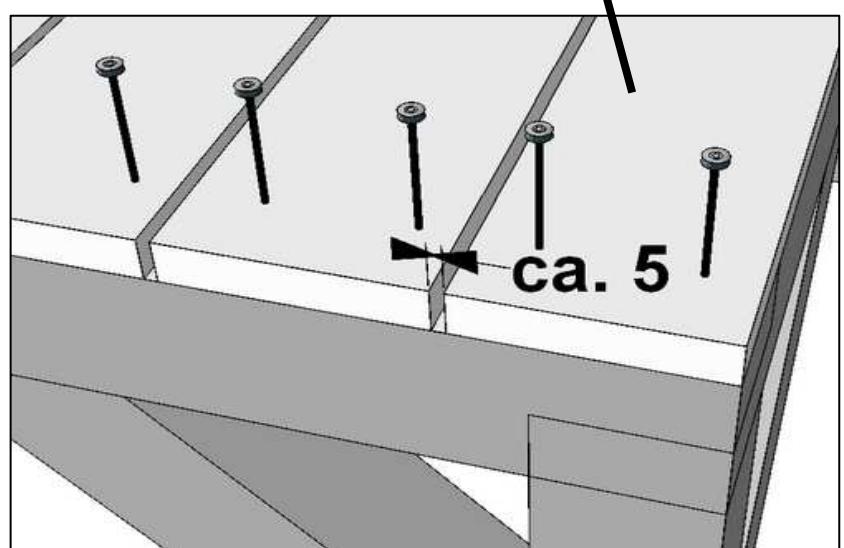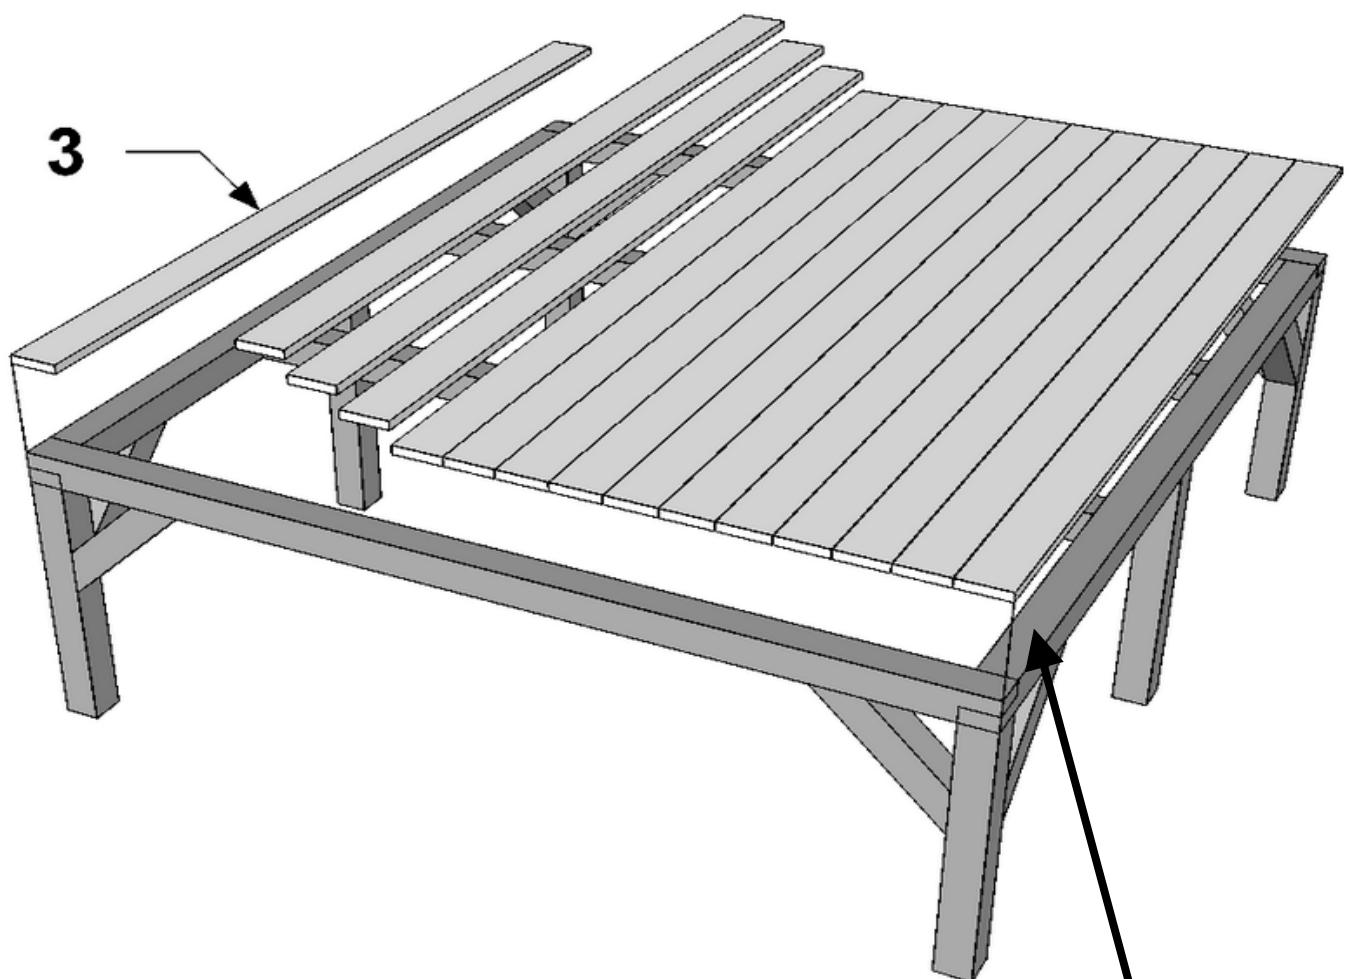

+ **3**




2,5 x 50

152

BAUWAGEN

Assembly instruction

5/16

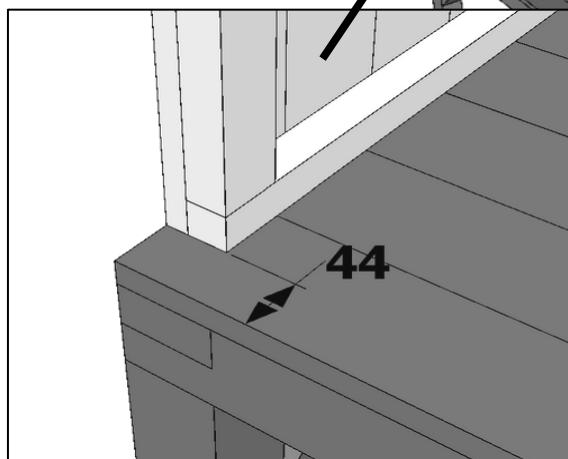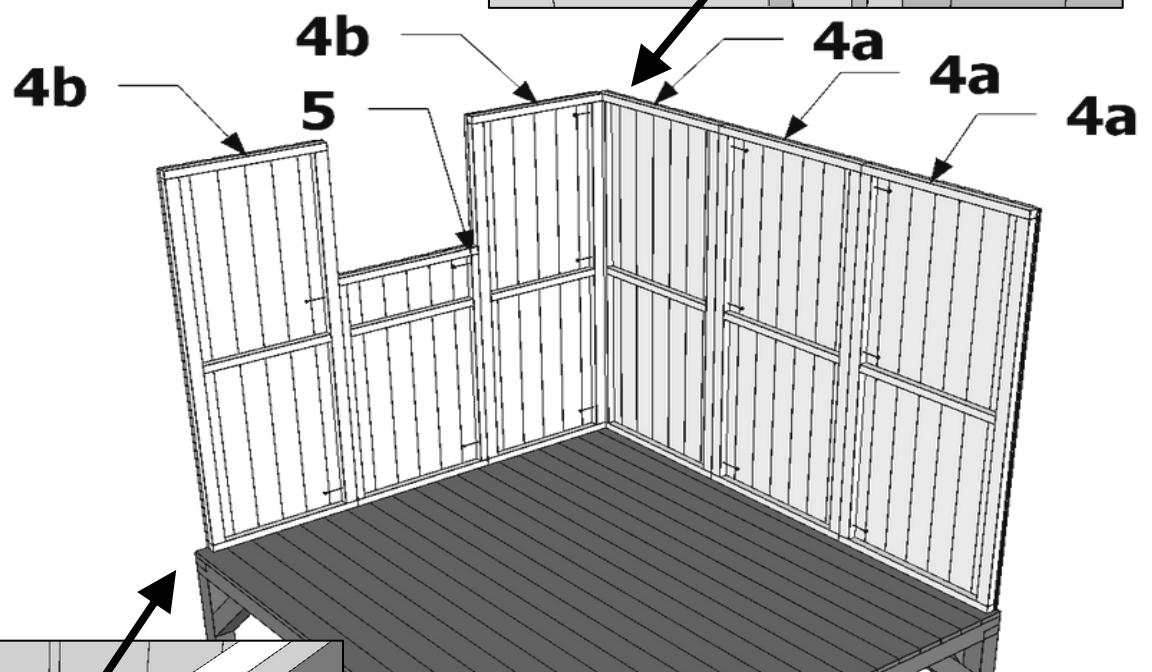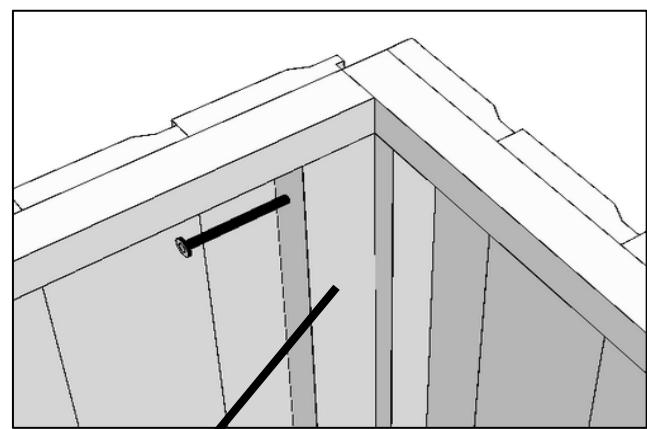


$$4 + 4 + 5 + 4 \\ + 4 + 4$$

BAUWAGEN

Assembly instruction

6/16

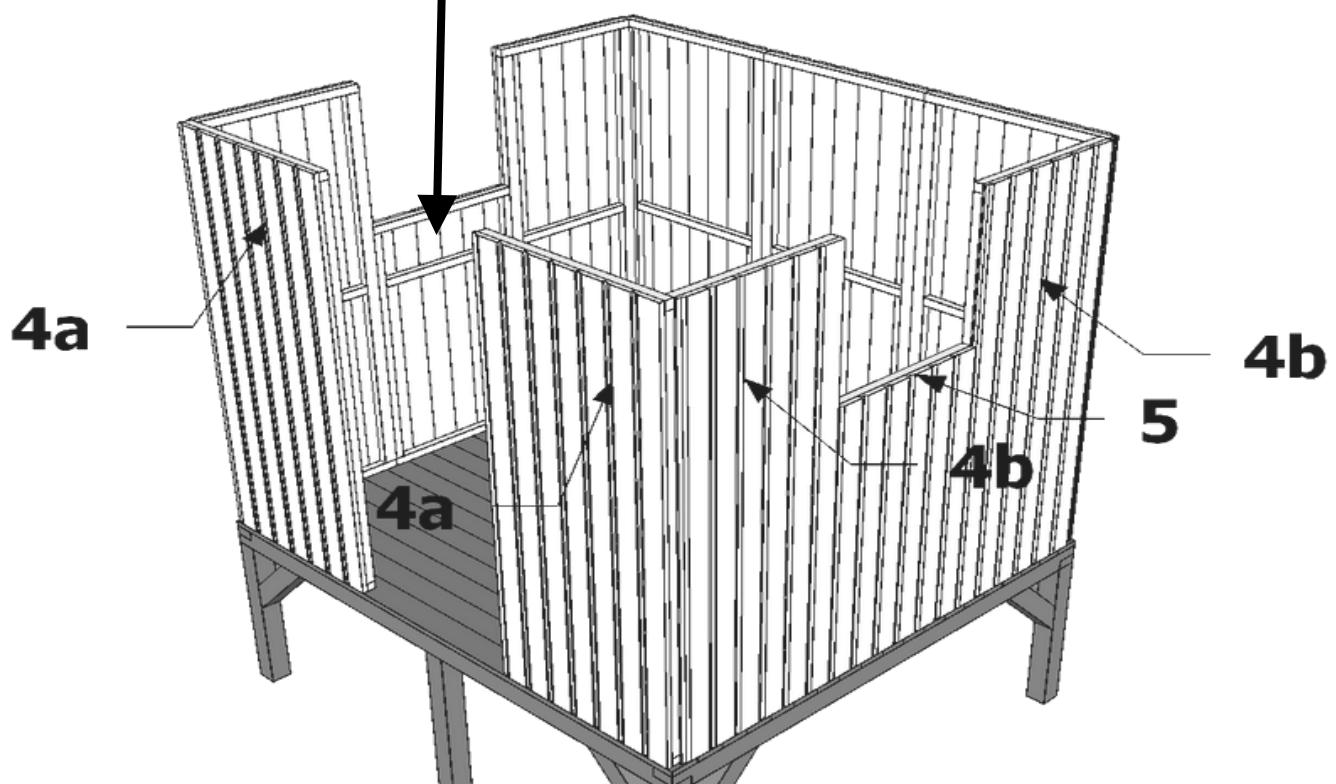

$$4 + 4 + 5 + 4 = 17$$



+ 4

$$17 + \text{base} = 62$$

BAUWAGEN

Assembly instruction

7/16

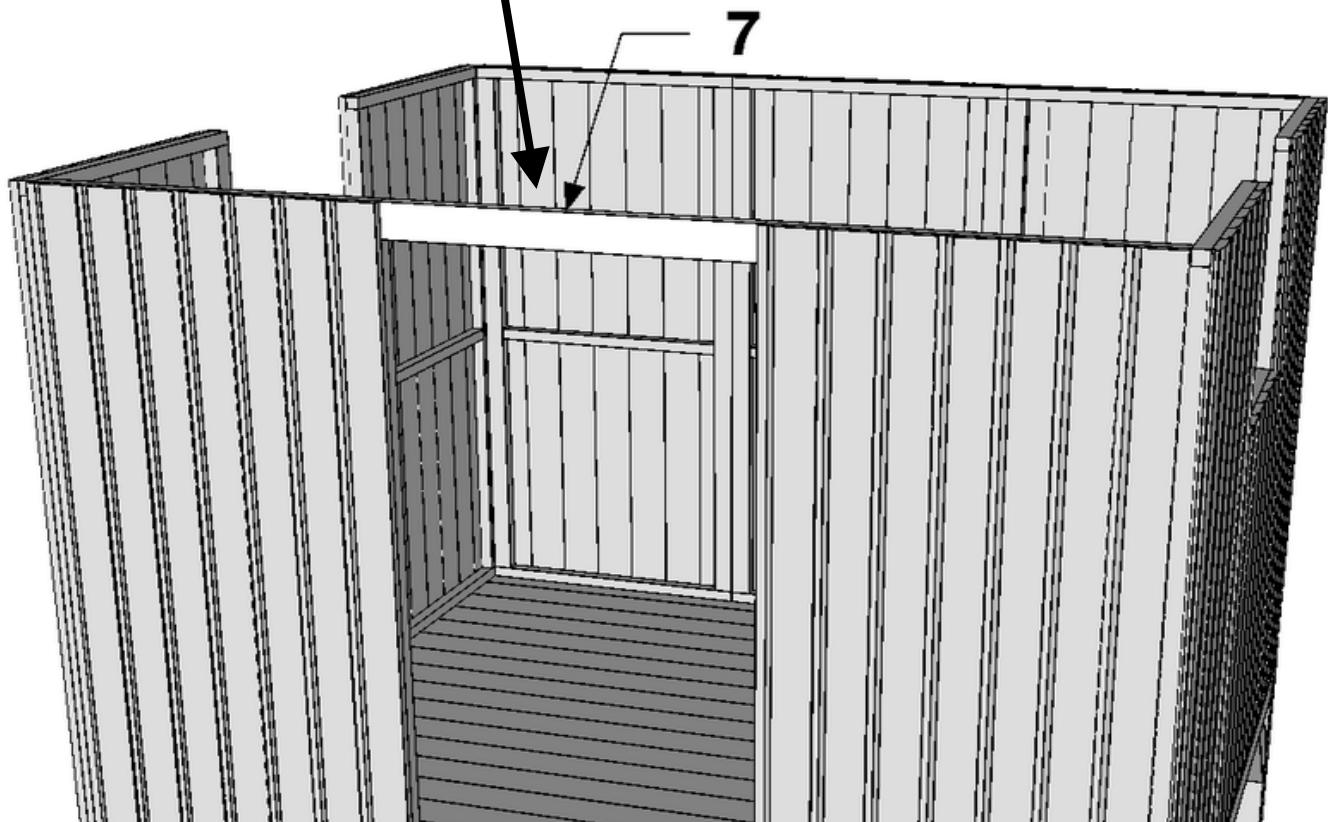
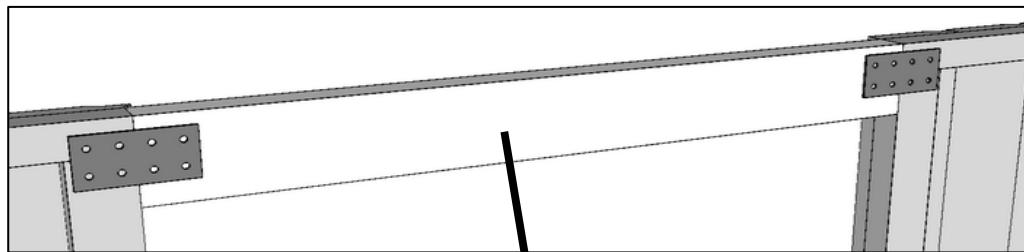


+ **7**

40 x 120 x 2	2
3,5 x 30	16

BAUWAGEN
Assembly instruction

8/16

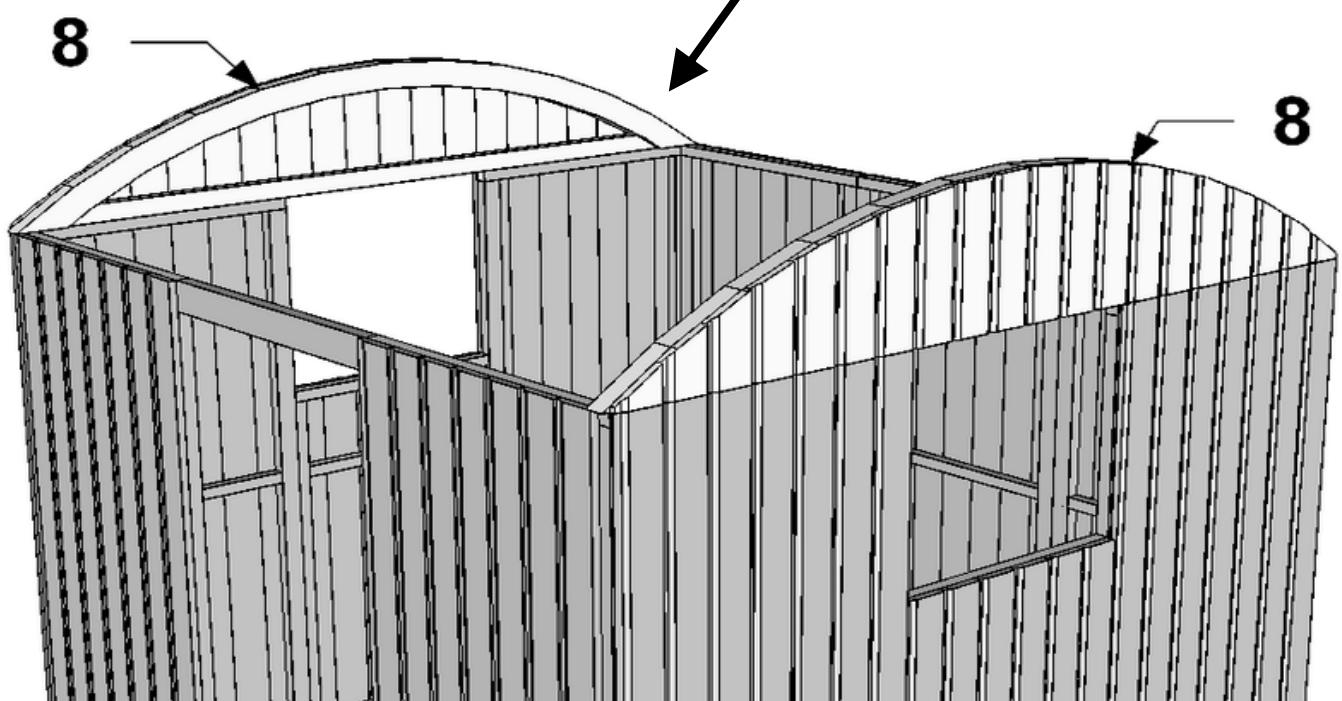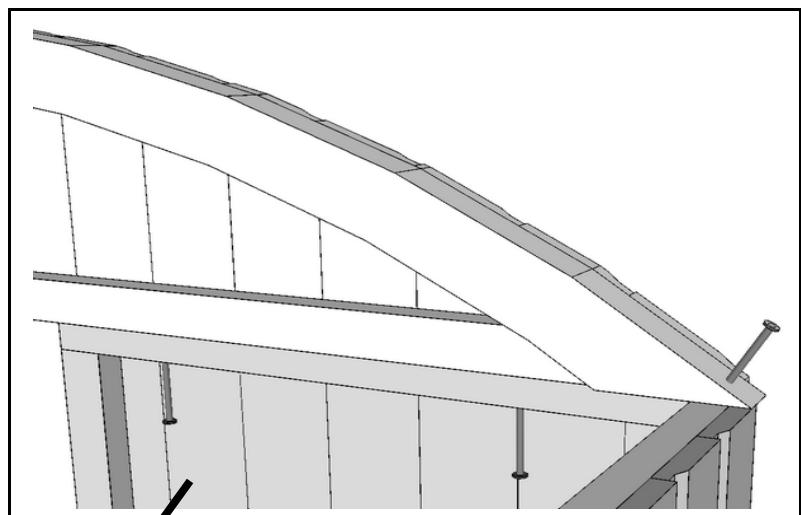


+ **8**

4 x 60	12
---------------	-----------

BAUWAGEN

Assembly instruction

9/16

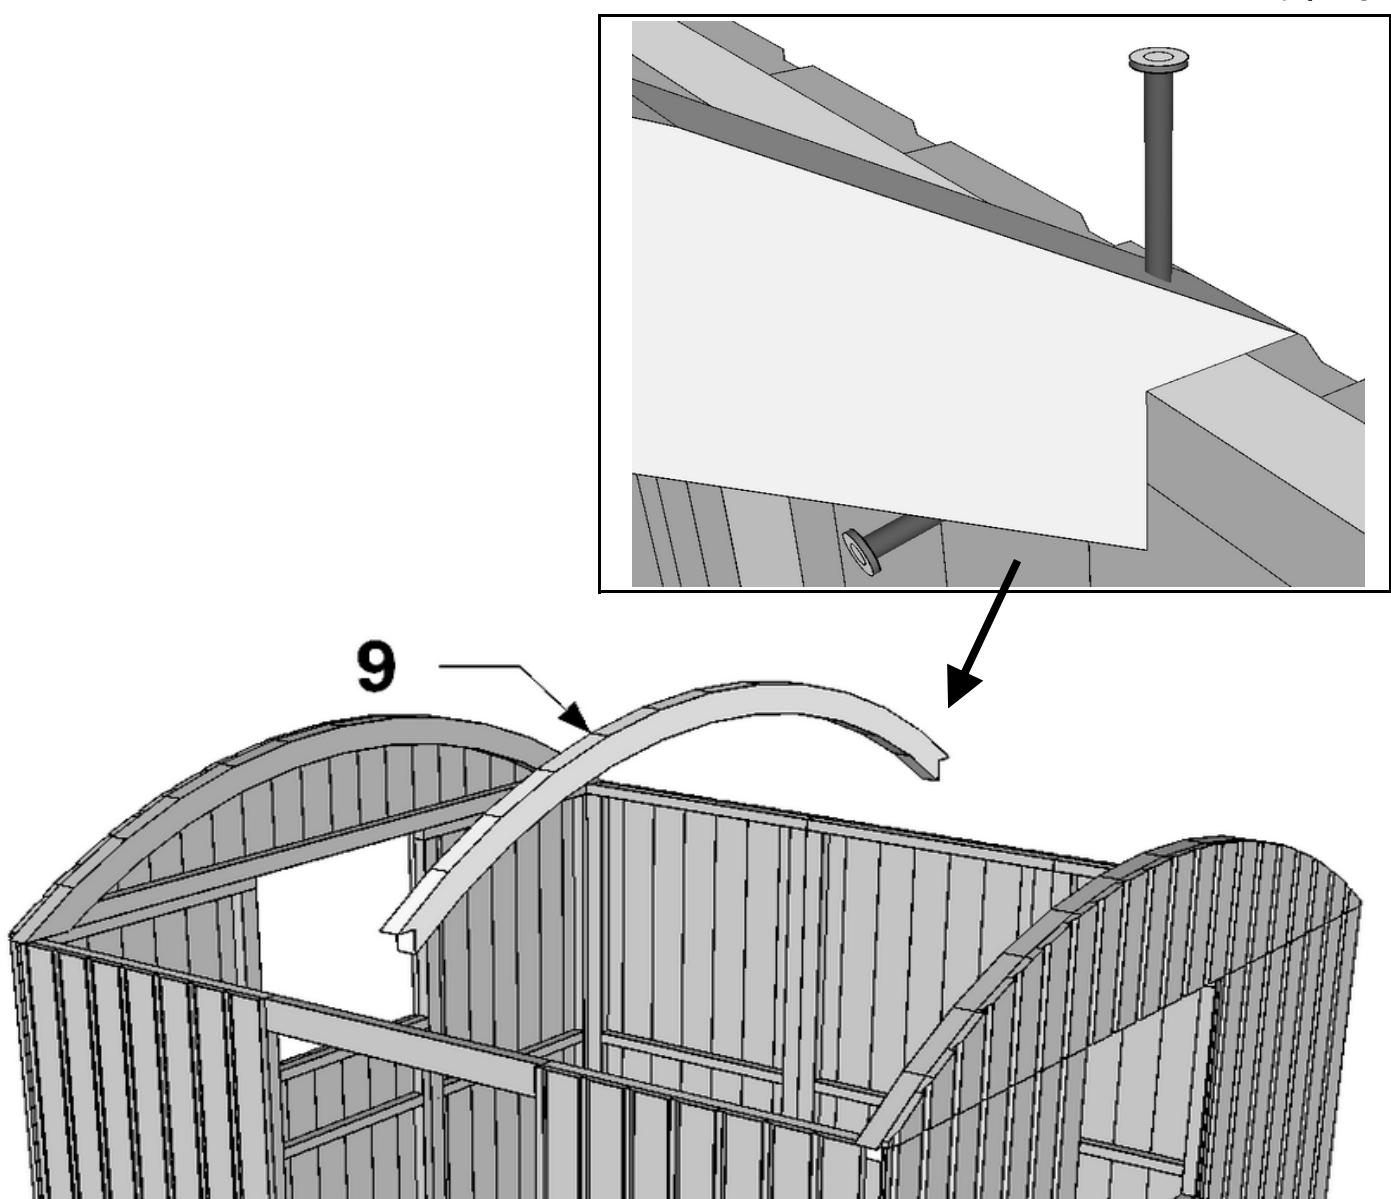

+ **9**



4 x 60

4

BAUWAGEN

Assembly instruction


10/16

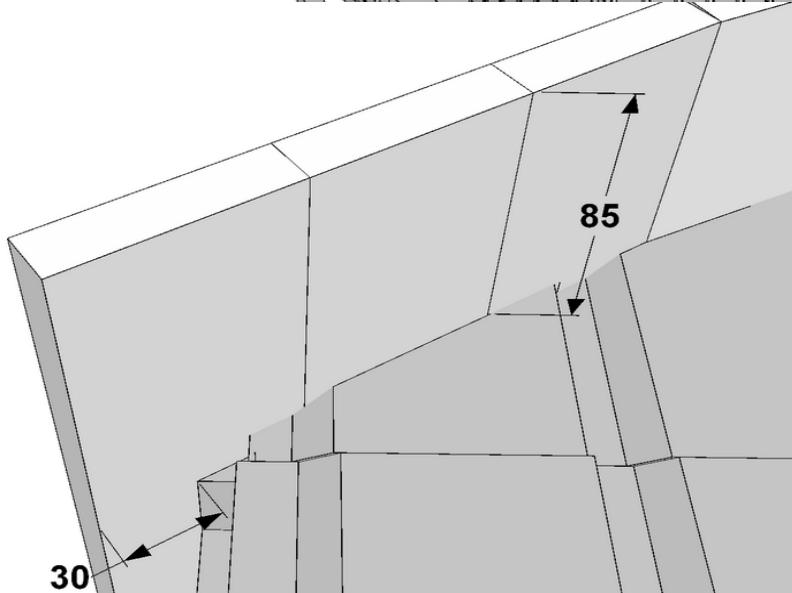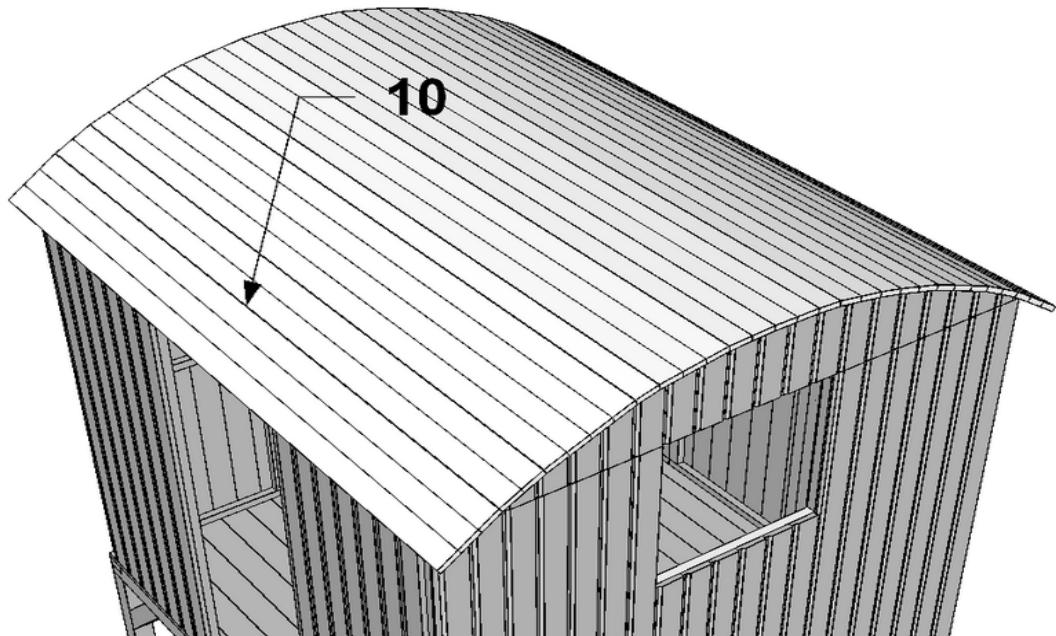

+ **10**

2,5 x 50

165

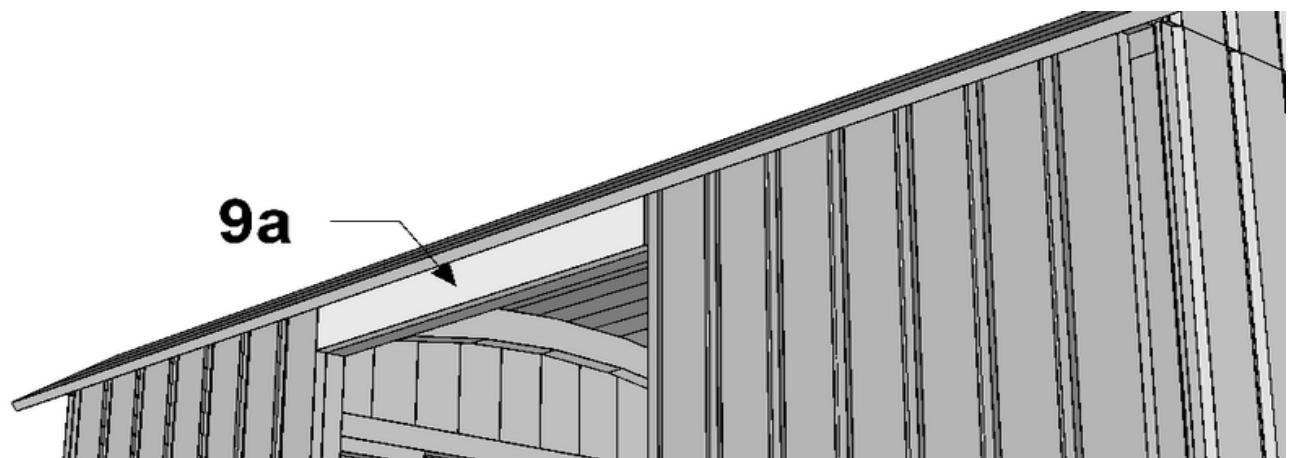

+ **9a**


3,5 x 40

3

BAUWAGEN

Assembly instruction

11/16

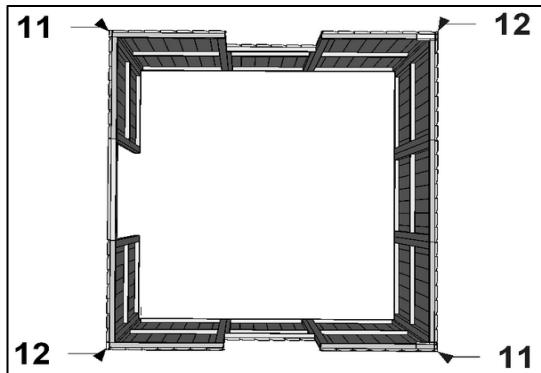


11


11

12

12

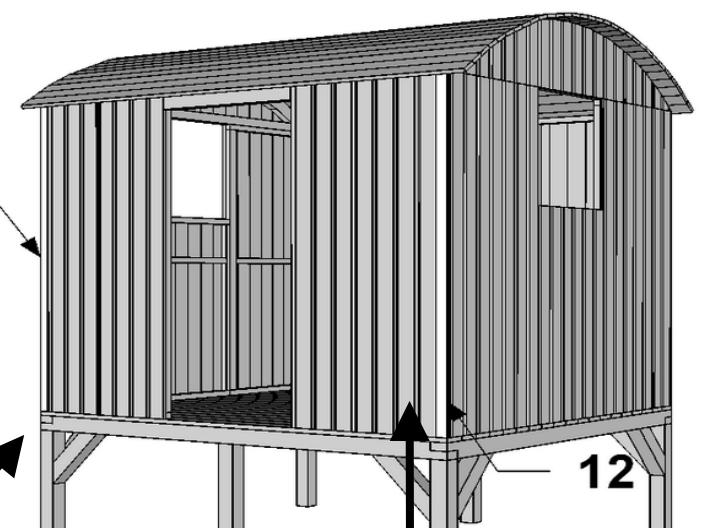


12

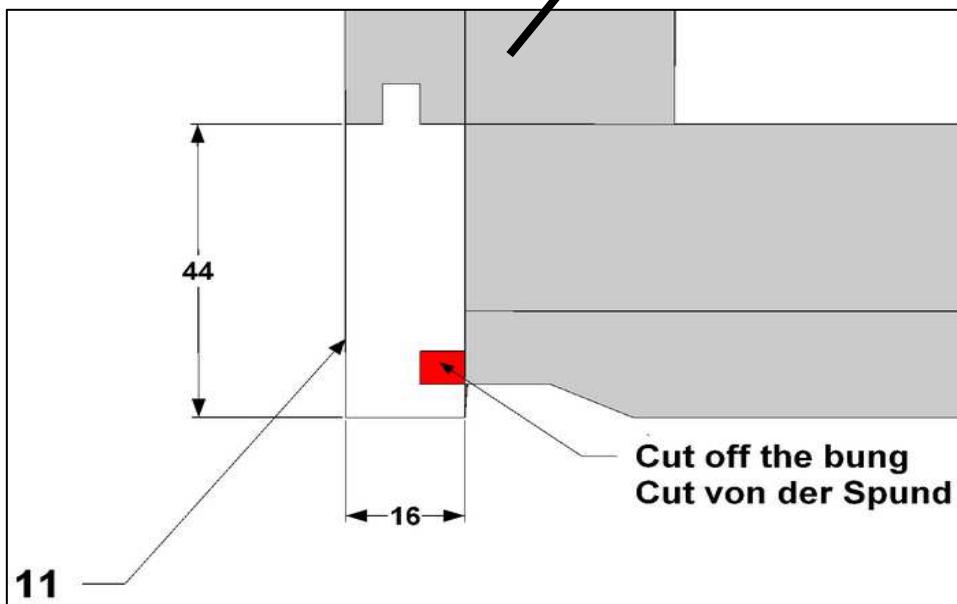

11

Cut off the bung
Cut von der Spund

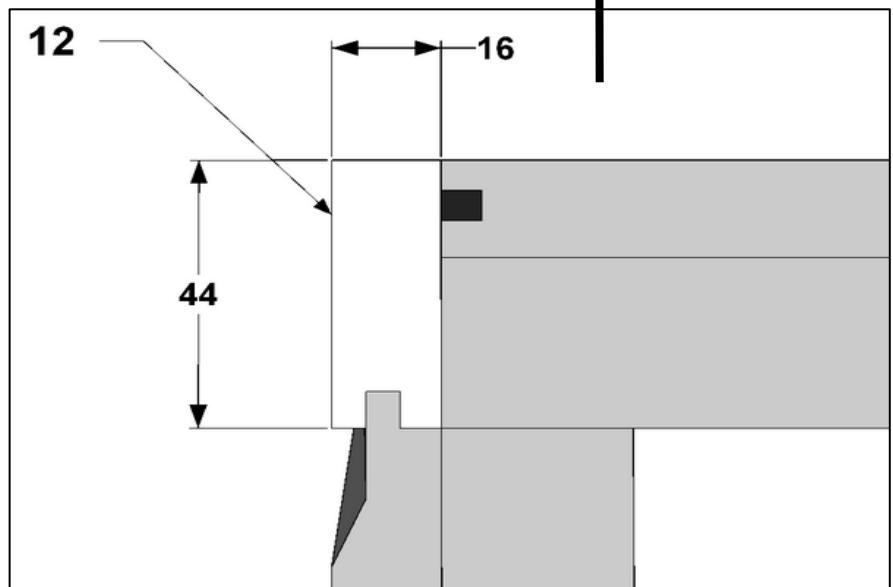

12

16

44

+

11

+

12


3,5 x 40

12

BAUWAGEN

Assembly instruction



12/16

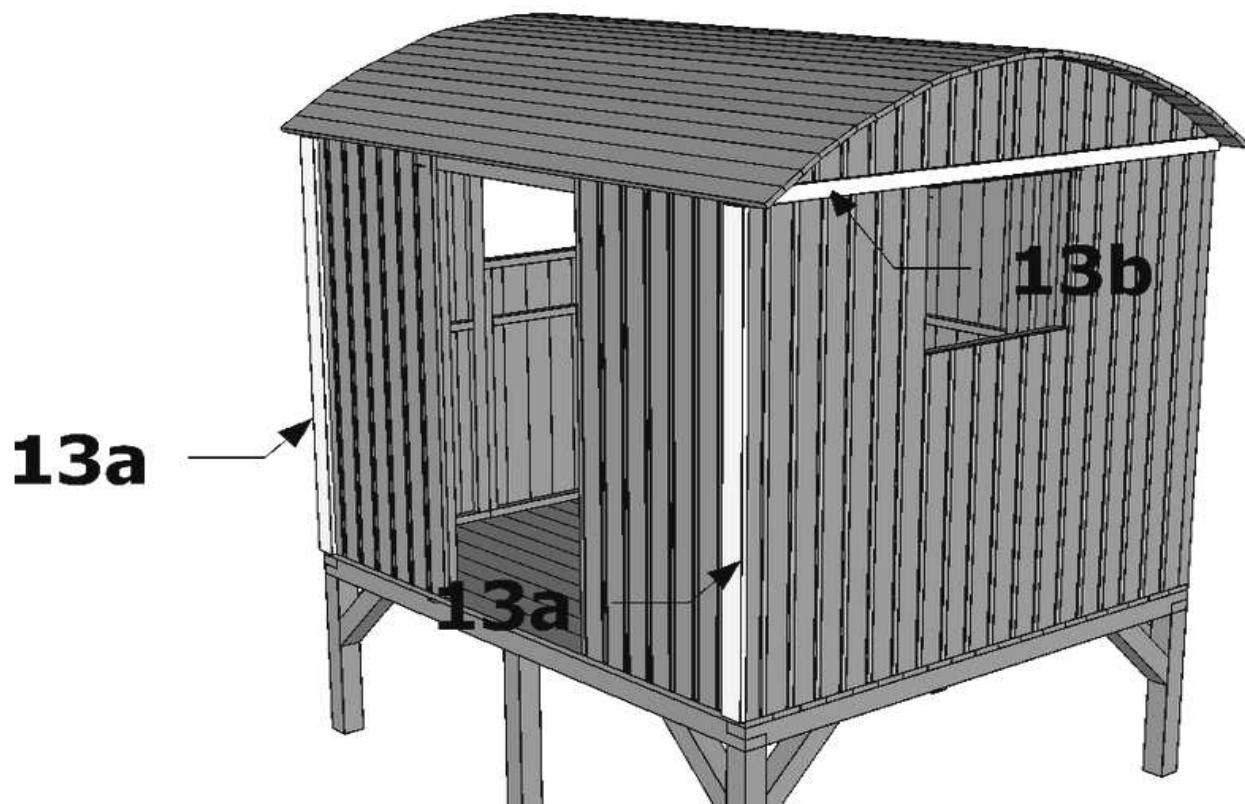

+ **13a** + **13b**

3,5 x 40


18

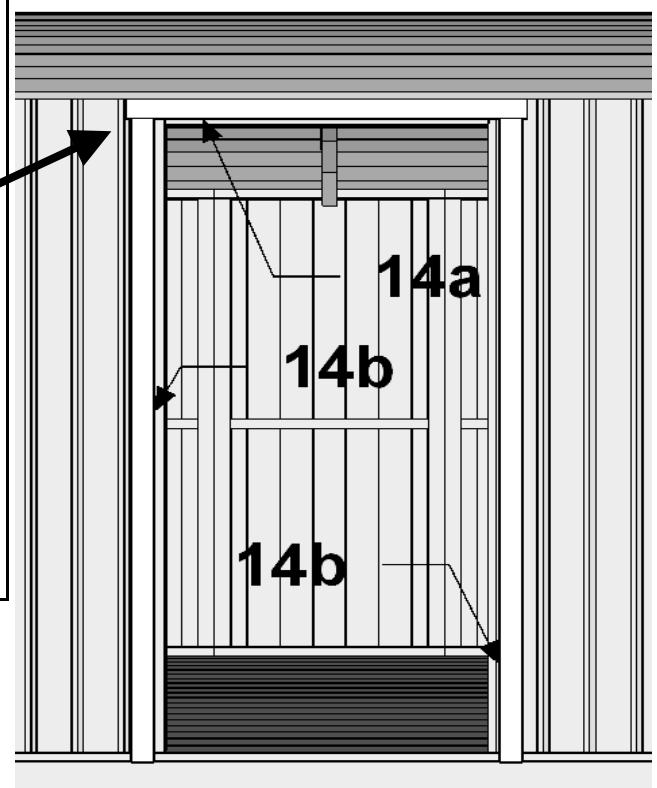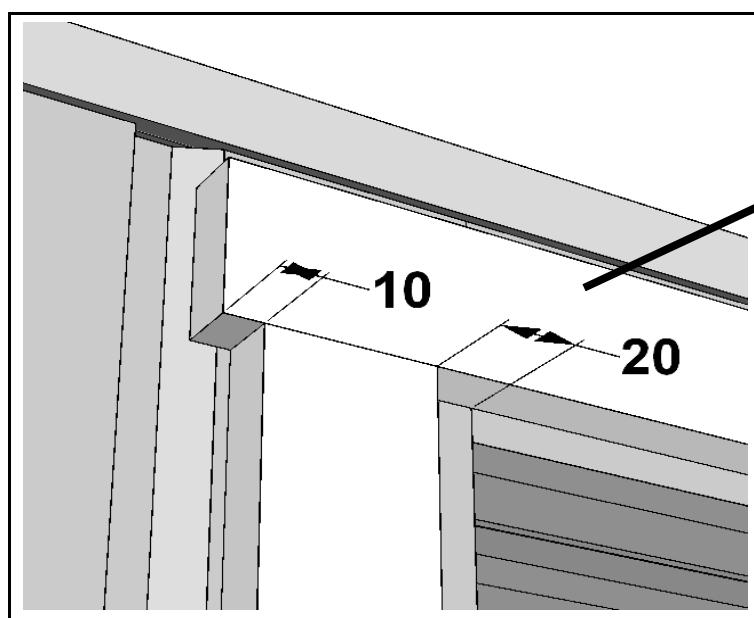


BAUWAGEN

Assembly instruction

13/16

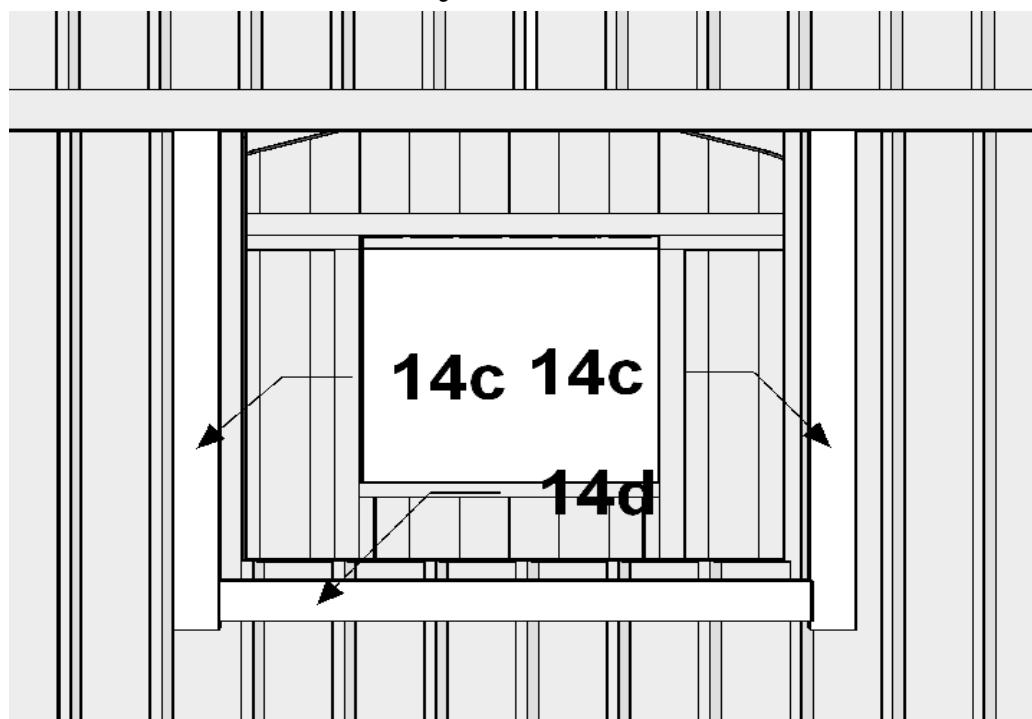

14a	+	14b	+	14c	+	14d	3,5 x 40	20
-----	---	-----	---	-----	---	-----	----------	----

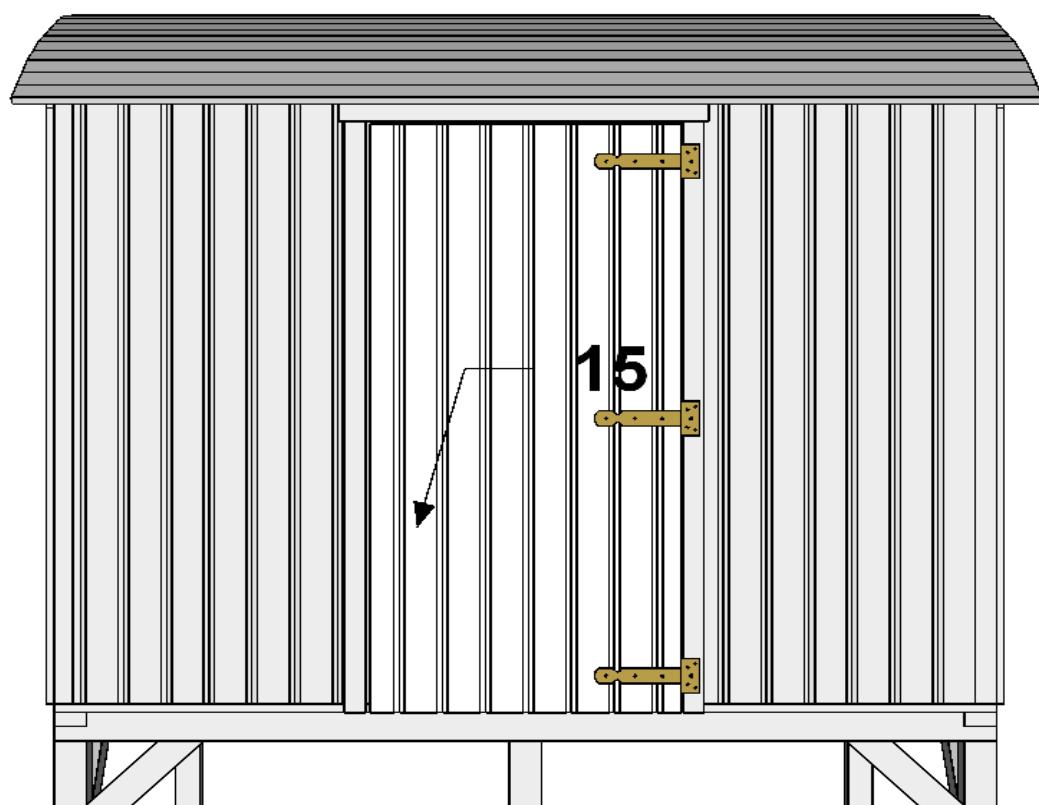


+	15	3,5 x 40	12
---	----	----------	----

BAUWAGEN


Assembly instruction

14/16

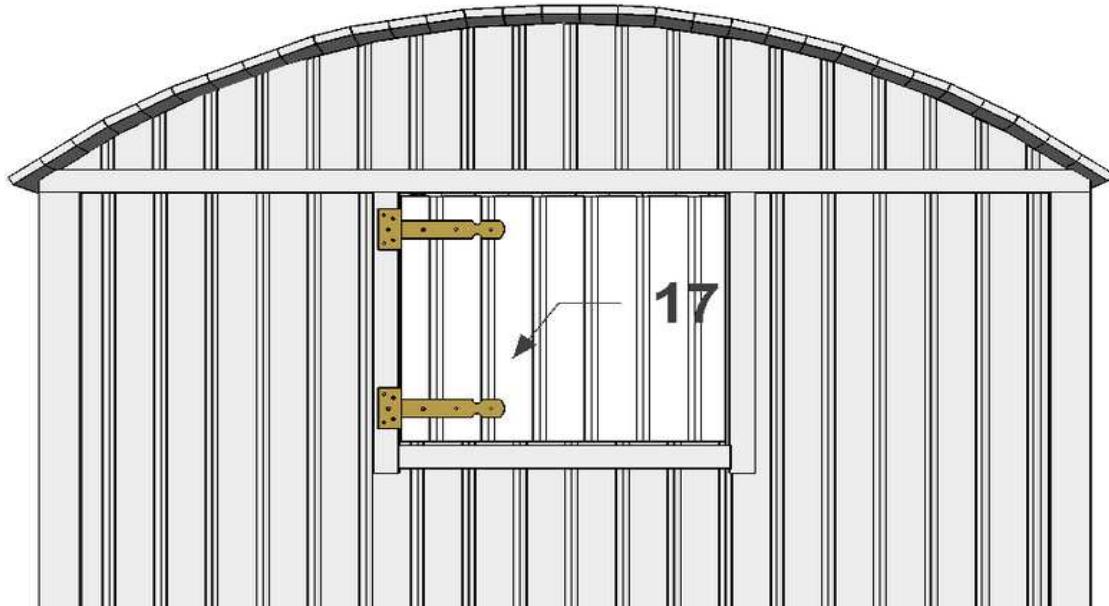

+	17	3,5 x 40	16
+	16	3,5 x 16	24

from the inside
von innen

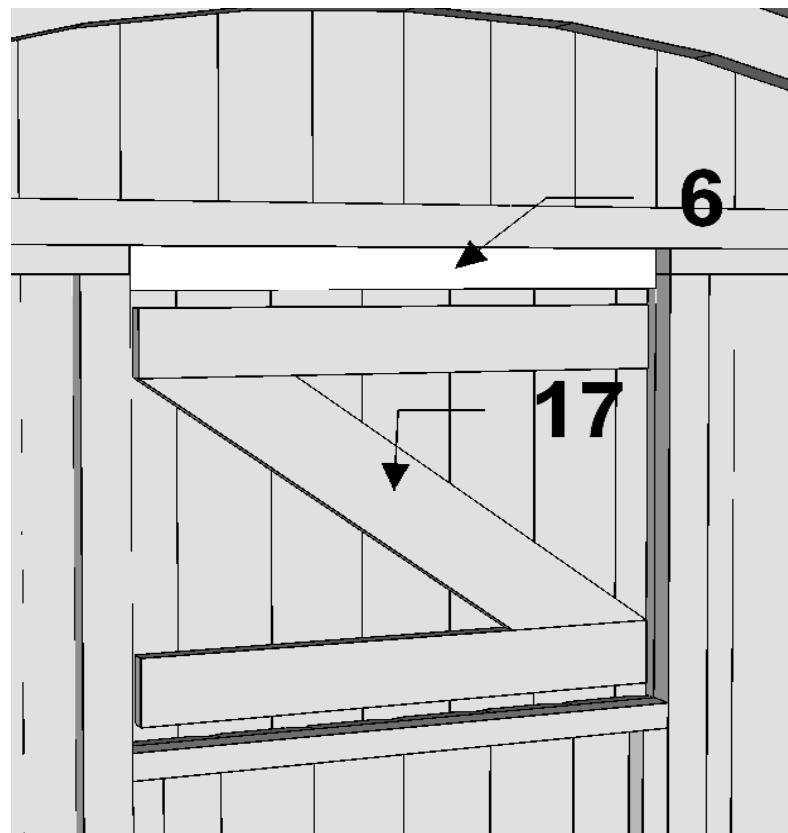


+	6	3,5 x 30	6
---	----------	-----------------	----------

BAUWAGEN



Assembly instruction

15/16

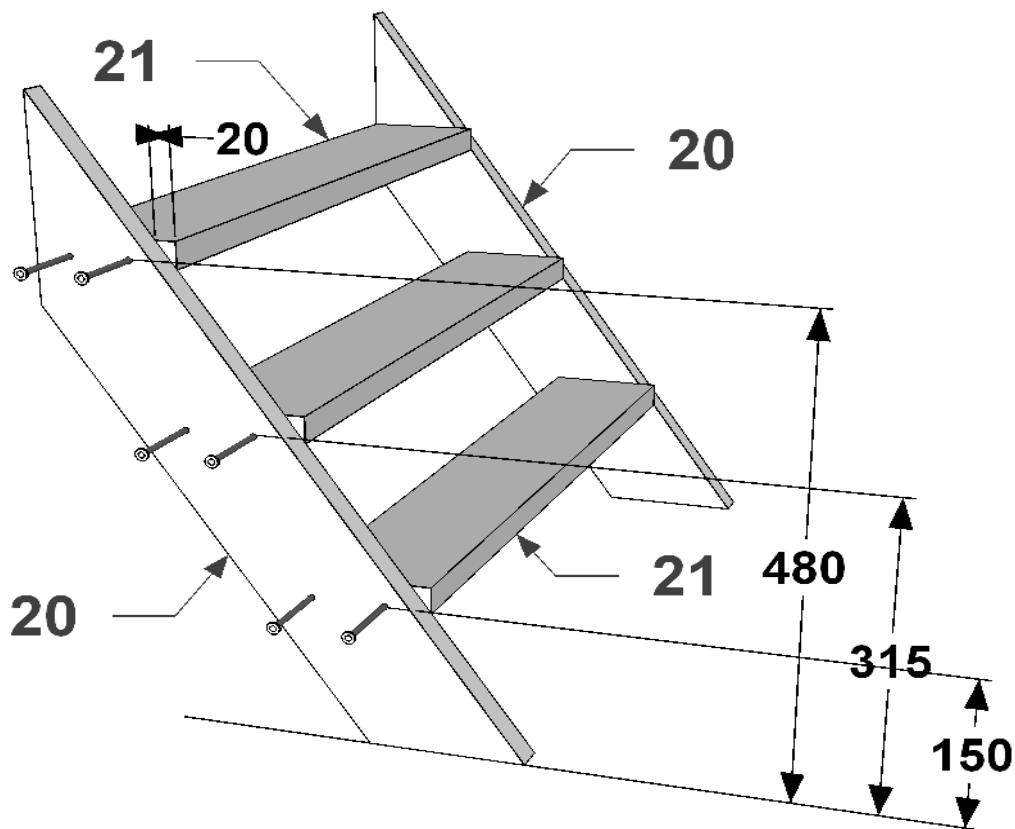

20 + **21**

4,5 x 70	12
-----------------	-----------

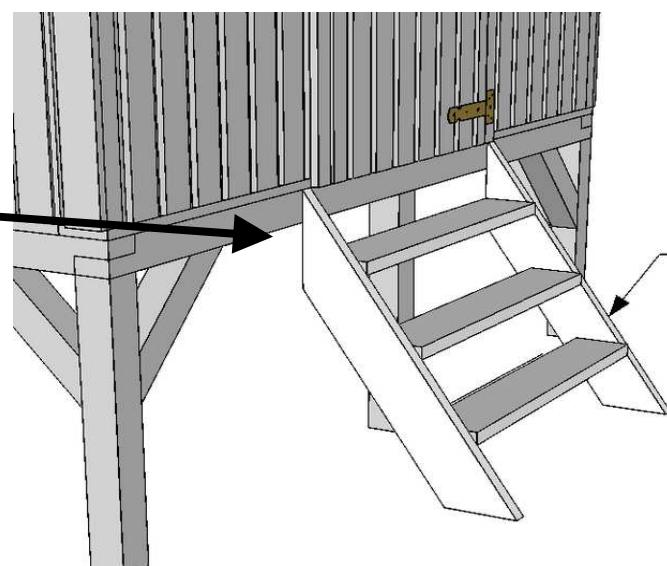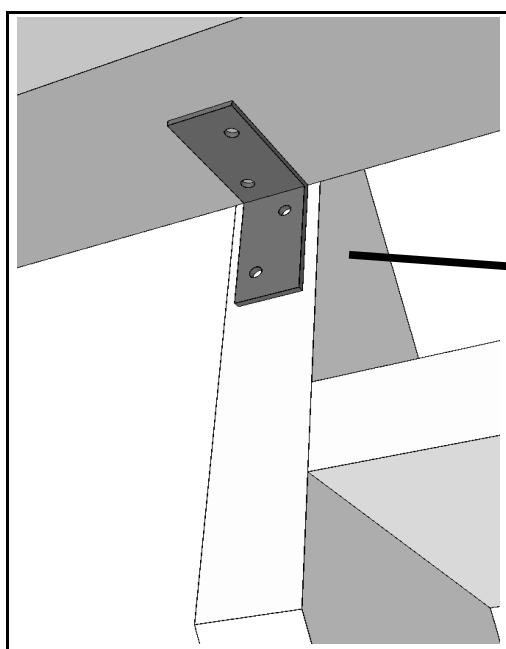


20/21 + **base**

40 x 40 x 20	2
3,5 x 40	12



BAUWAGEN

Assembly instruction

16/16

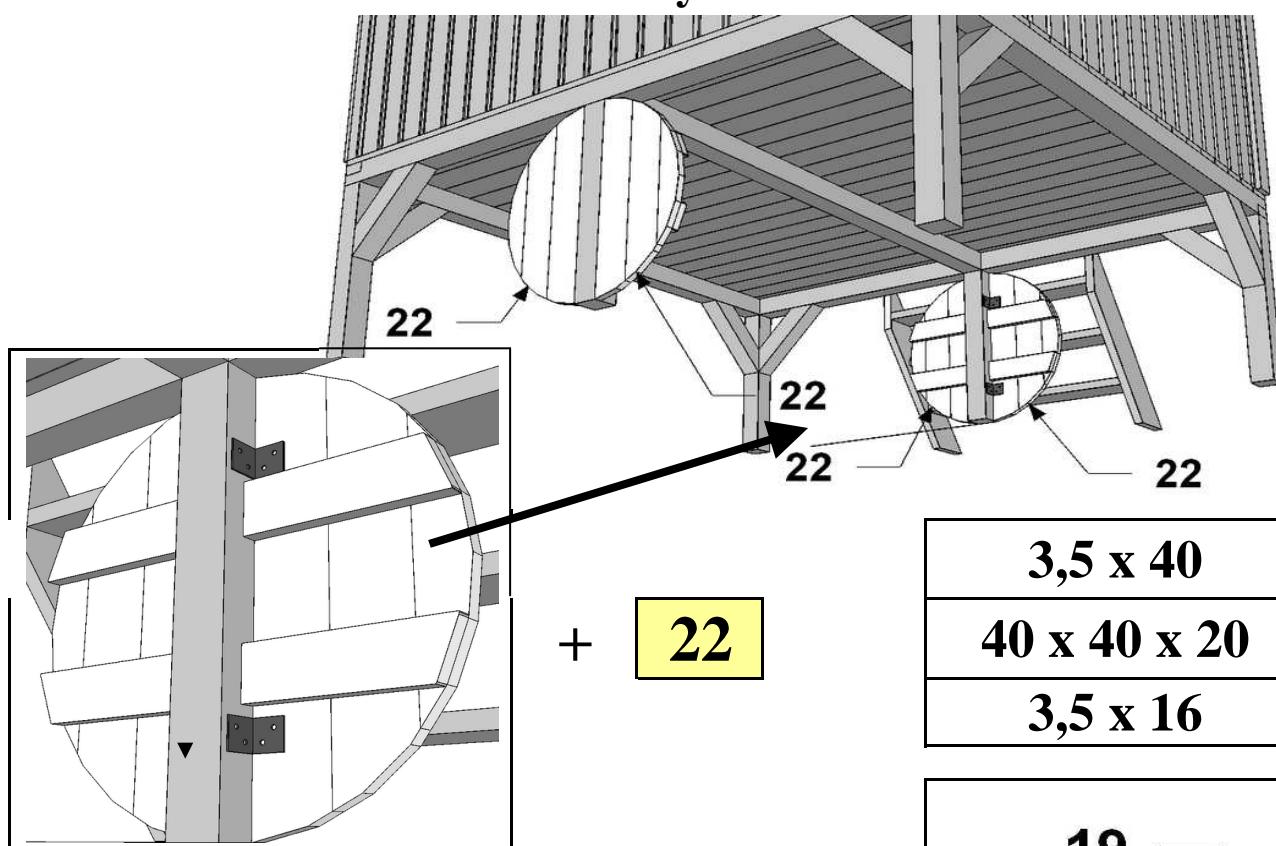

3,5 x 40	24
40 x 40 x 20	8
3,5 x 16	24

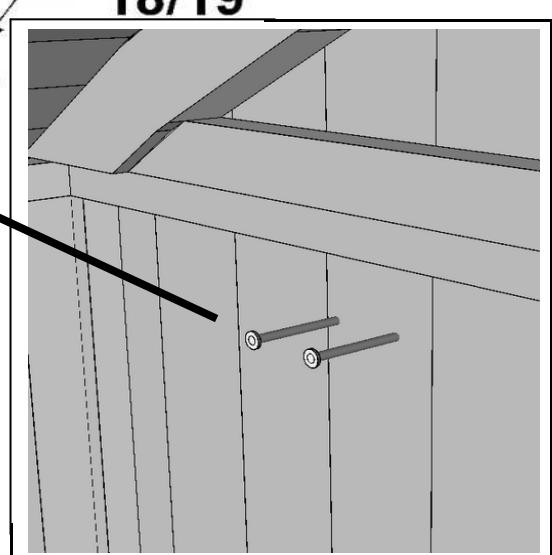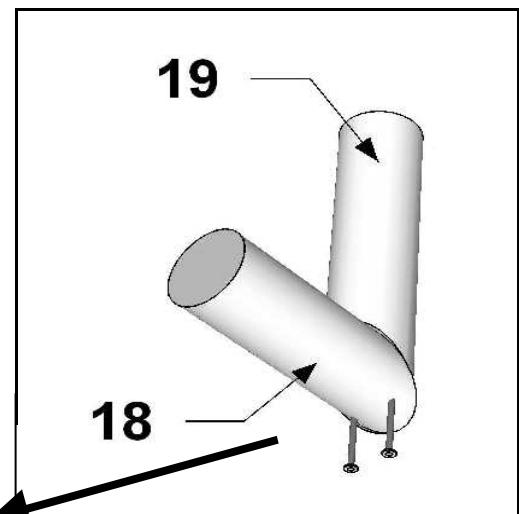

18	+	19	+	18/19	4 x 60	4
-----------	----------	-----------	----------	--------------	---------------	----------